AVAILABLE INSTALLATION METHODS

TYPES OF DECORATIVE PANELS USED FOR WINE PEGS			
FLAT PANEL	HEAVY AND/OR TEXTURED PANEL ADHERED TO UNINSTALLED PLYWOOD PANEL	HEAVY AND/OR TEXTURED PANEL ADHERED TO PRE-INSTALLED PLYWOOD PANEL	NONE (Pegs installed directly into drywall)
Option no.1	Option no.1 + Option no.3	Option no.4	Option no.5
Option no.2	Option no.2 + Option no.3		

Notes

- Options 3 and 4 are not recommended for use with the XY series.
- All options can be used with the Beta Bloc and the Nek Rite series.

PANEL INSTALLATION:

Option no.1 HANGER BOLT METHOD

APPLICATIONS

The hanger bolt panel installation method **requires wood framing** and is therefore most suitable for new construction and remodels.

INSTALLATION OVERVIEW

1.
Screw hanger bolts (B) into the solid wood reinforcement (A) and pre-drill the holes in the decorative panel according to the layout of your wine pegs (see online data sheet).

2a.
If you are using a flat decorative panel:
Assemble wine pegs on the decorative panel using JCB connector bolts (C) and suspend the panel on the wall from your hanger bolts (B). Continue to step 3.

2b.
If you are using a heavy and/or textured decorative panel:
Continue with Option no.3.

3.
Secure the decorative panel by screwing the remaining wine pegs onto the hanger bolts (B).

REQUIRED RICHELIEU PRODUCTS (SOLD SEPARATLY)

See pages 7 and 8 (B, C)

1.

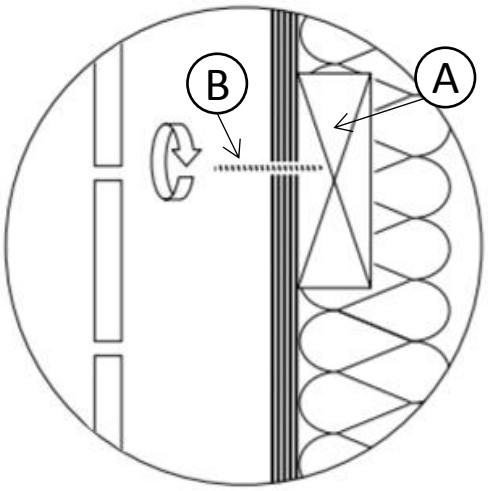

2a.

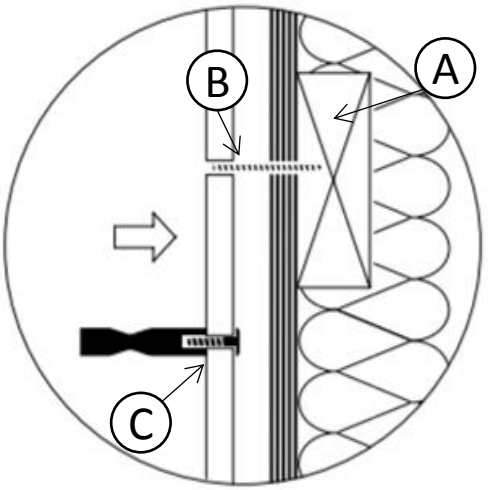

3.

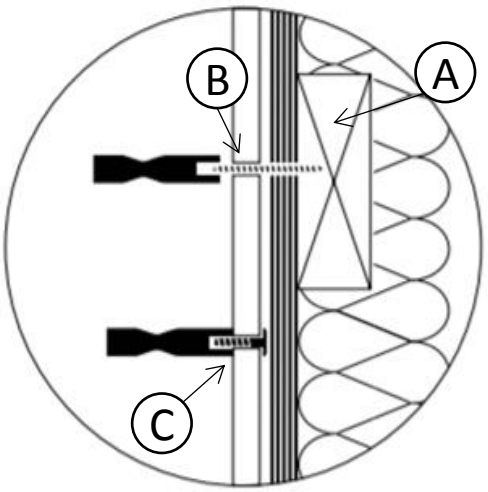

PANEL INSTALLATION:

Option no.2 ALUMINUM Z-CLIP METHOD

APPLICATIONS

The Z-clip panel assembly method **requires wood framing** and is therefore most suitable for new construction and remodels.

INSTALLATION OVERVIEW

1.
Pre-drill your Z-clip moldings (D). Install one half of the Z-clip molding onto the wall, making sure to screw into the wood frame. Pre-drill the holes in your decorative panel according to the layout of your wine pegs (see online data sheet).

2a.
If you are using a flat decorative panel:
Screw the other half of the Z-clip molding (D) onto the back of your decorative panel and install all your wine pegs. Continue to step 3.

2b.
If you are using a heavy and/or textured decorative panel:
Continue with the Option no.3.

3.
Install the assembled decorative panel to the wall by clipping the two Z–clip moldings (D) together.

REQUIRED RICHELIEU PRODUCTS
(SOLD SEPARATLY)

See pages 7 and 8 (B, C, D)

1.

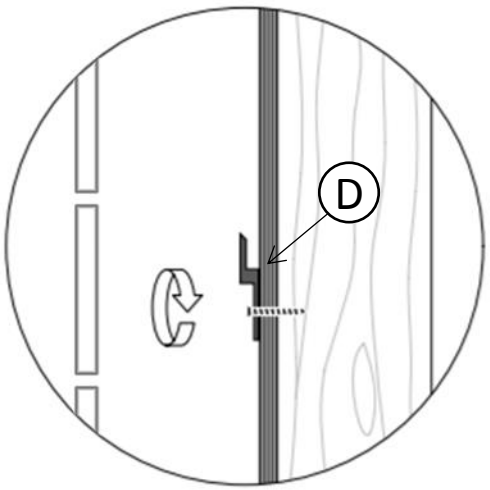

2a.

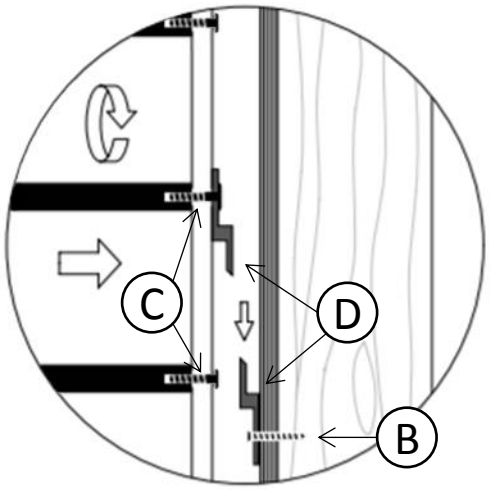

3.

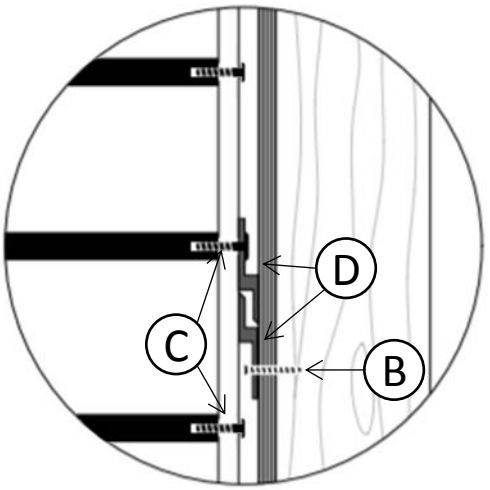

PANEL INSTALLATION:

Option no.3 SPACER AND BOLT METHOD FOR HEAVY AND/OR TEXTURED PANEL

APPLICATIONS

The spacer and bolt assembly method is used in conjunction with Option no.1 or no.2.

*Not recommended for XY Wine Pegs.

INSTALLATION OVERVIEW

1.
Pre-drill 3/4” diameter holes in the heavy and/or textured decorative panel according to the layout of your wine pegs (see online data sheet). Glue it to another panel made of plywood that is also pre-drilled.

2.
Install the spacers (E) into the heavy and/or textured decorative panel using JCB connector bolts (C). Install additional spacers as needed depending on the depth of the decorative panel using allen key screws (F).

3.
Install the wine pegs on the spacers (E) by using the allen key screw (F). Refer to Option no.1 or no.2 to install the panels to the wall.

REQUIRED RICHELIEU PRODUCTS (SOLD SEPARATLY)

See pages 7 and 8 (C, E, F)

1.

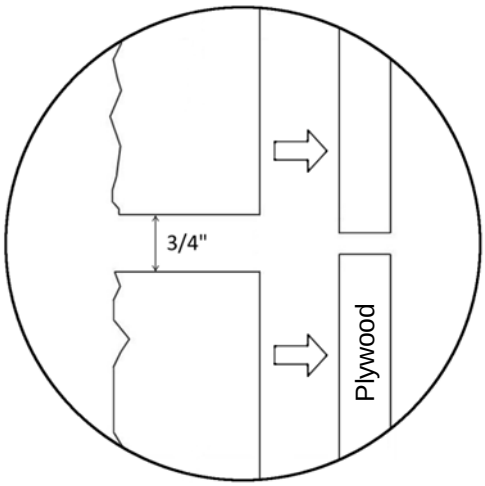

2.

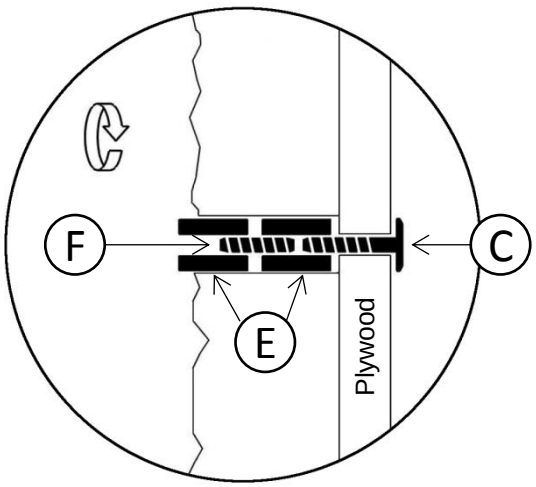

3.

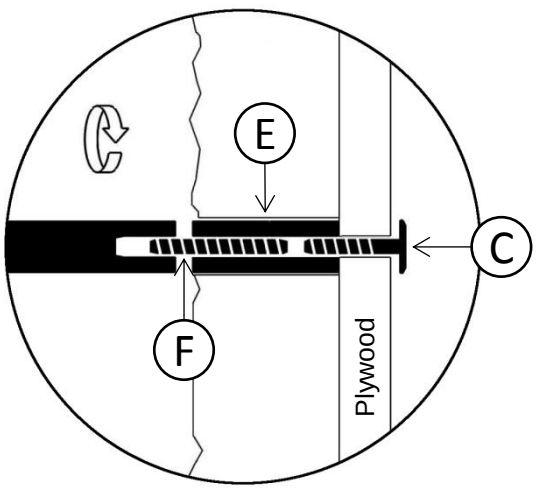

PANEL INSTALLATION:

Option no.4 SPACERS AND D-NUT METHOD FOR HEAVY AND/OR TEXTURED PANEL

APPLICATIONS

The spacers and D-Nut assembly method is used when a heavy and/or textured decorative panel is being adhered to a plywood substrate panel that is already installed to the wall.

*Not recommended for XY Wine Pegs

INSTALLATION OVERVIEW

1.
Pre-drill 3/4” diameter holes in the heavy and/or textured decorative panel according to the layout of your wine pegs (see online data sheet). Pre-drill 11/32” diameter holes in the plywood panel and insert the D-nuts. Adhere the two panels together.

2.
Install the spacers (E) into the heavy and/or textured decorative panel using allen key screws (F). Install additional spacers as needed depending on the depth of your decorative panel using the allen key screws (F).

3.
Install the wine pegs on the spacers (E) by using the allen key screw (F).

REQUIRED RICHELIEU PRODUCTS
(SOLD SEPARATLY)

See pages 8 and 9 (E, F, G)

1.

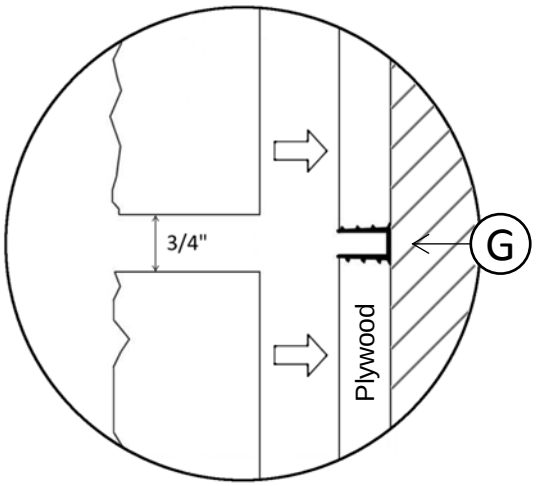

2.

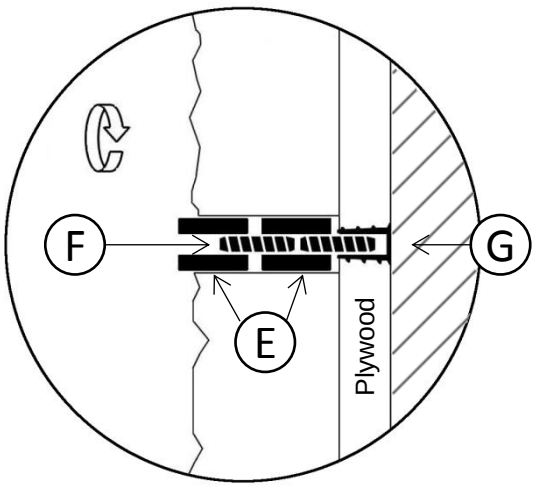

3.

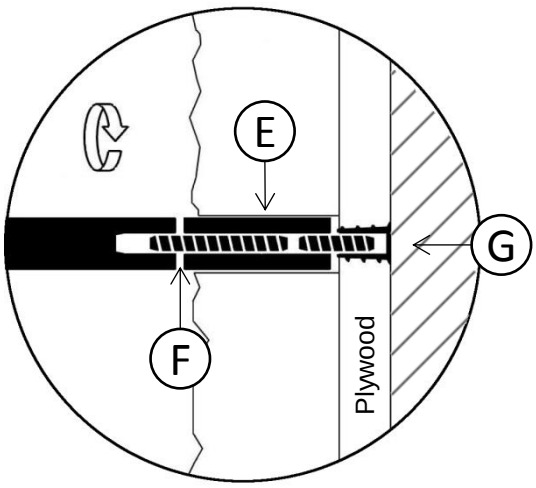

WALL INSTALLATION:

Option no.5 DRYWALL INSTALLATION METHOD

APPLICATIONS

The drywall installation method allows the wine pegs to be installed directly to the wall without any additional panel.

INSTALLATION OVERVIEW

1.
Insert the anchors (H) directly into the drywall according to the layout of your wine pegs (see online data sheet).

2.
Screw the washers (I) to the wall using hanger bolts (B).

3.
Finish assembling your rods by installing them to the hanger bolts (B).

REQUIRED RICHELIEU PRODUCTS
(SOLD SEPARATLY)

See pages 7 and 9 (B, H, I)

1.

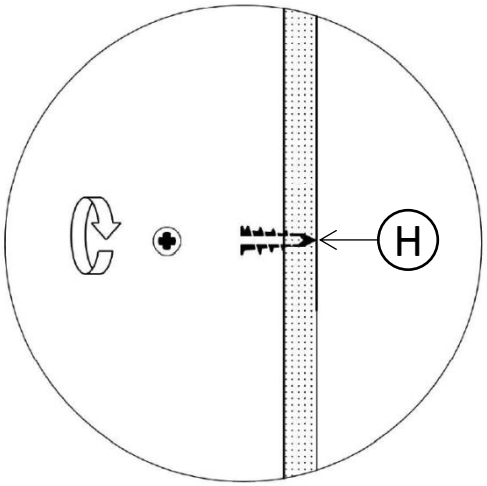

2.

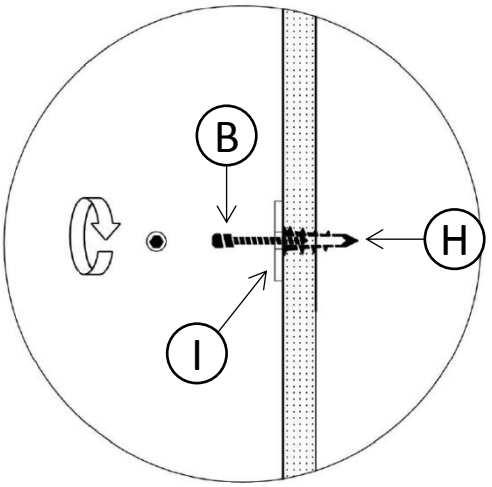

3.

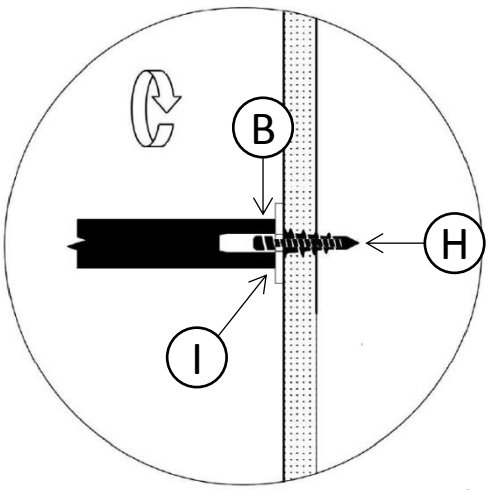

REQUIRED RICHELIEU PRODUCTS ACCORDING TO THE METHOD USED
(SOLD SEPARATLY)

Hanger Bolts :

Suggested Richelieu Products	Package Format	Lengths	
HZ14112	3000 Units	38 mm	1-1/2"
HZ14112VP	25 Units	38 mm	1-1/2"
HZ14134	2000 Units	44 mm	1-3/4"
HZ14134VP	25 Units	44 mm	1-3/4"
HZ142	2000 Units	51 mm	2"
HZ142VP	25 Units	51 mm	2"
HZ14212	1500 Units	64 mm	2-1/2"
HZ14212VP	25 Units	64 mm	2-1/2"
HZ143	1200 Units	76 mm	3"

(B)

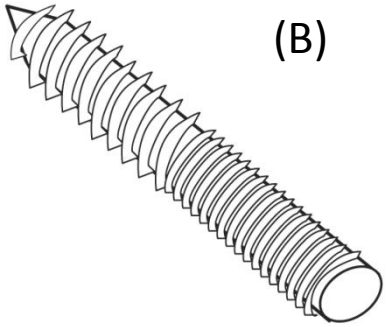

(C)

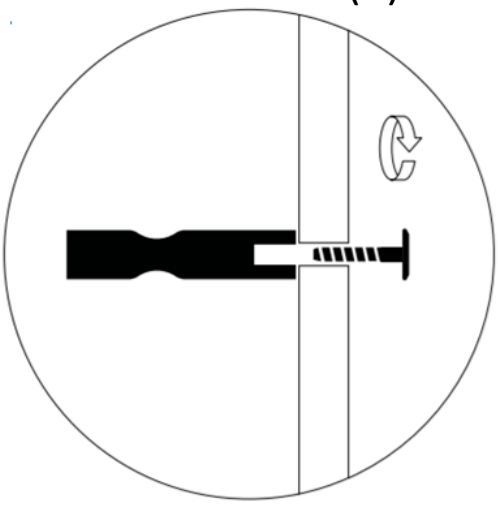

JCB-B Bolts :

Panel Thickness		Suggested Richelieu Products	Length of the Bolts	
1/2"	13 mm	JCBB0101C2	30 mm	1-3/16"
5/8"	16 mm	JCBB0101C2	30 mm	1-3/16"
3/4"	19 mm	JCBB0102C2	35 mm	1-3/8"
1"	25 mm	JCBB0103C2	40 mm	1-9/16"
1-1/4"	32 mm	JCBB0105C2	50 mm	1-31/32"

Package Format : sold by unit
Diameter : 1/4 " (6.4 mm)
Thread Count : 20

REQUIRED RICHELIEU PRODUCTS ACCORDING TO THE METHOD USED
(SOLD SEPARATLY)

Aluminum Z-Clip Molding :

Suggested Richelieu Products	Lengths	
318708D10	2.44 m	8’
318712D10	3.66 m	12’

Package Format: sold by length
Thickness : 1/8" (3 mm)

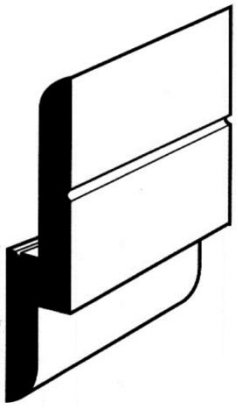

(D)

Wine Peg Spacers :

Suggested Richelieu Products	Lengths	
WPS3810	9.5 mm	3/8"
WPS1210	12 mm	1/2"
WPS0110	25 mm	1"

Package Format: 2 units
Diameter: 3/4 " (19 mm)

(E)

Allen Key Screws :

Suggested Richelieu Products	Lengths	
WPAK114900	32 mm	1-1/4"
WPAK112900	38 mm	1-1/2"
WPAK2900	50 mm	2"
WPAK214900	56 mm	2-1/4"

Package Format: 2 units
Diameter : 1/4 " (6.4 mm)
Size of the hex head : 1/8" (3 mm)

(F)

REQUIRED RICHELIEU PRODUCTS ACCORDING TO THE METHOD USED
(SOLD SEPARATLY)

D-Nuts :

Suggested Richelieu Products	Lengths	
0D0107C2G	13 mm	1/2"
0D0208C2G	20 mm	25/32"
0D0209C2G	25 mm	31/32"

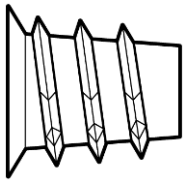

(G)

Package Format: sold by unit
Diameter: 1/4 " (6.4 mm)

Drywall Anchors :

Suggested Richelieu Products	Package Format
PA516VMK	6 Units
PA516MK	12 Units
PA516VA	100 Units

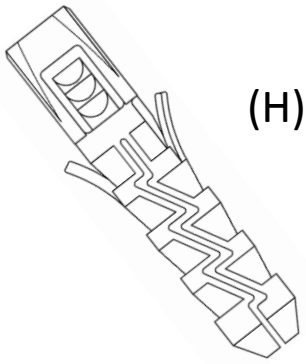

(H)

Wine Peg Washer :

Suggested Richelieu Products	Diameter	
WPW11810	28.7 mm	1 1/8"

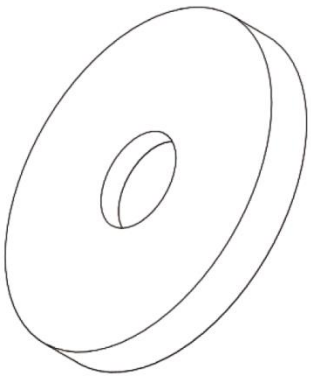

(I)

Package Format: 2 units
Thickness : 1/8" (3 mm)